


Through the Make Ready process if there is a pole change out required there is an additional 60 days for processing through Northern California Joint Pole Association. Any required line work and/or pole change outs will required an additional 4 to 6 months lead time.

All Encroachment procedures must be followed for public right of way.

Business Days (BDs), Service Notification (SN), Construction Drawing (CN)

***Note—Numbering of tasks are not sequential

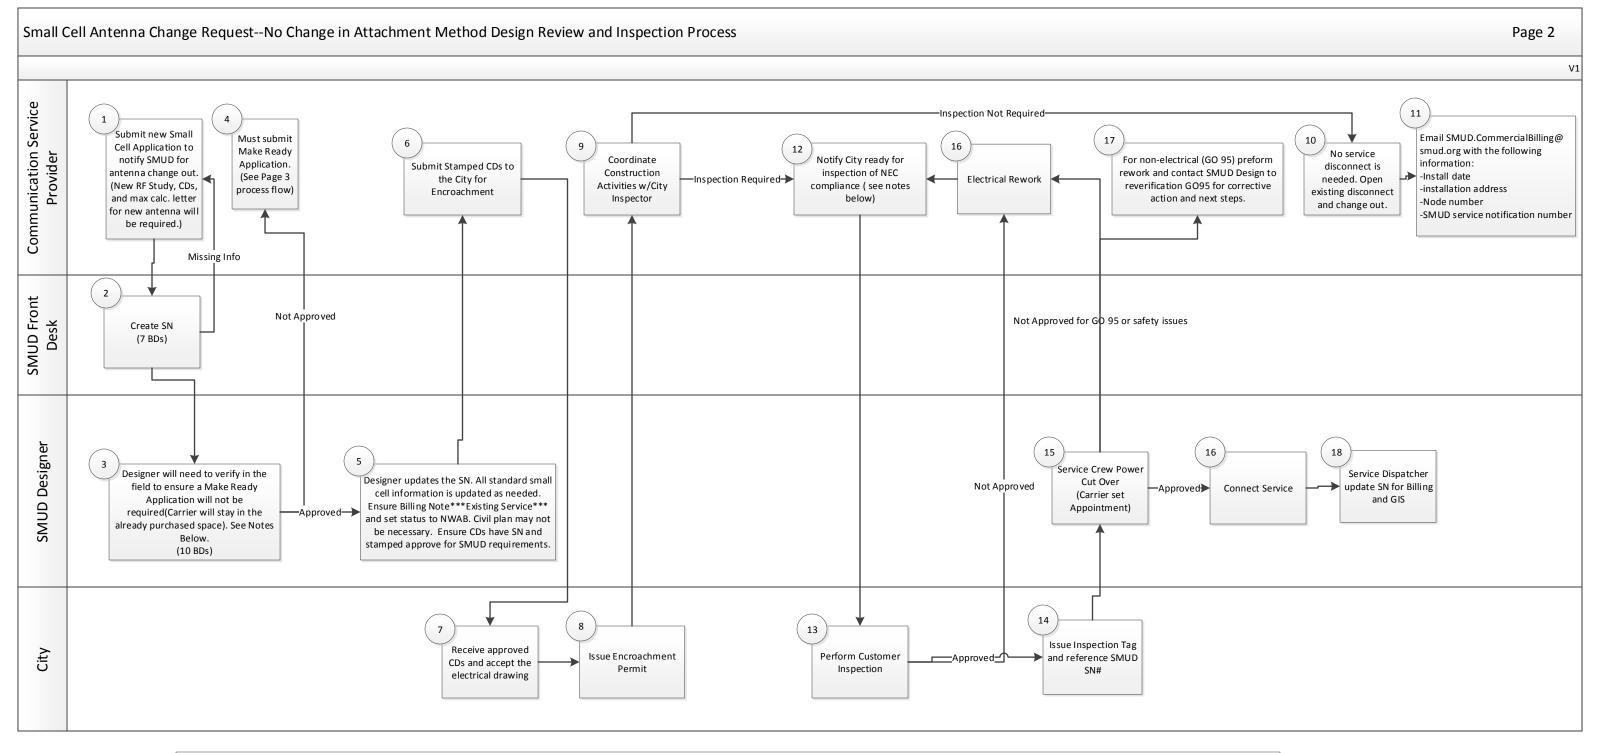

The carrier will not change the attachment method meaning: no bracket, bolts, framing, weight of antenna is equal to or less than current antenna, height change, or movement of antenna from one side to another side of the pole.

Designer will need to ask carrier if any of the following will need to be changed: line or load side wire, grounding to disconnect box, change out of the disconnect box. If so, inspection tag and SMUD service crew is required. Access to fuse bay requires a SMUD crew.

All Encroachment procedures must be followed for public right of way.

Business Days (BDs), Service Notification (SN), Construction Drawing (CN)


***Note—Numbering of tasks are not sequential

The carrier will change the attachment method meaning: bracket, bolts, framing, antenna weight, height change, movement of antenna from one side to another side of the pole, or add antennas. The following changes require an inspection and SMUD service crew: line or load side wire, grounding to disconnect box, change out of the disconnect box. Need access to the fuse bay will require a SMUD crew.

All Encroachment procedures must be followed for public right of way.

Business Days (BDs), Service Notification (SN), Construction Drawing (CN)


***Note—Numbering of tasks are not sequential

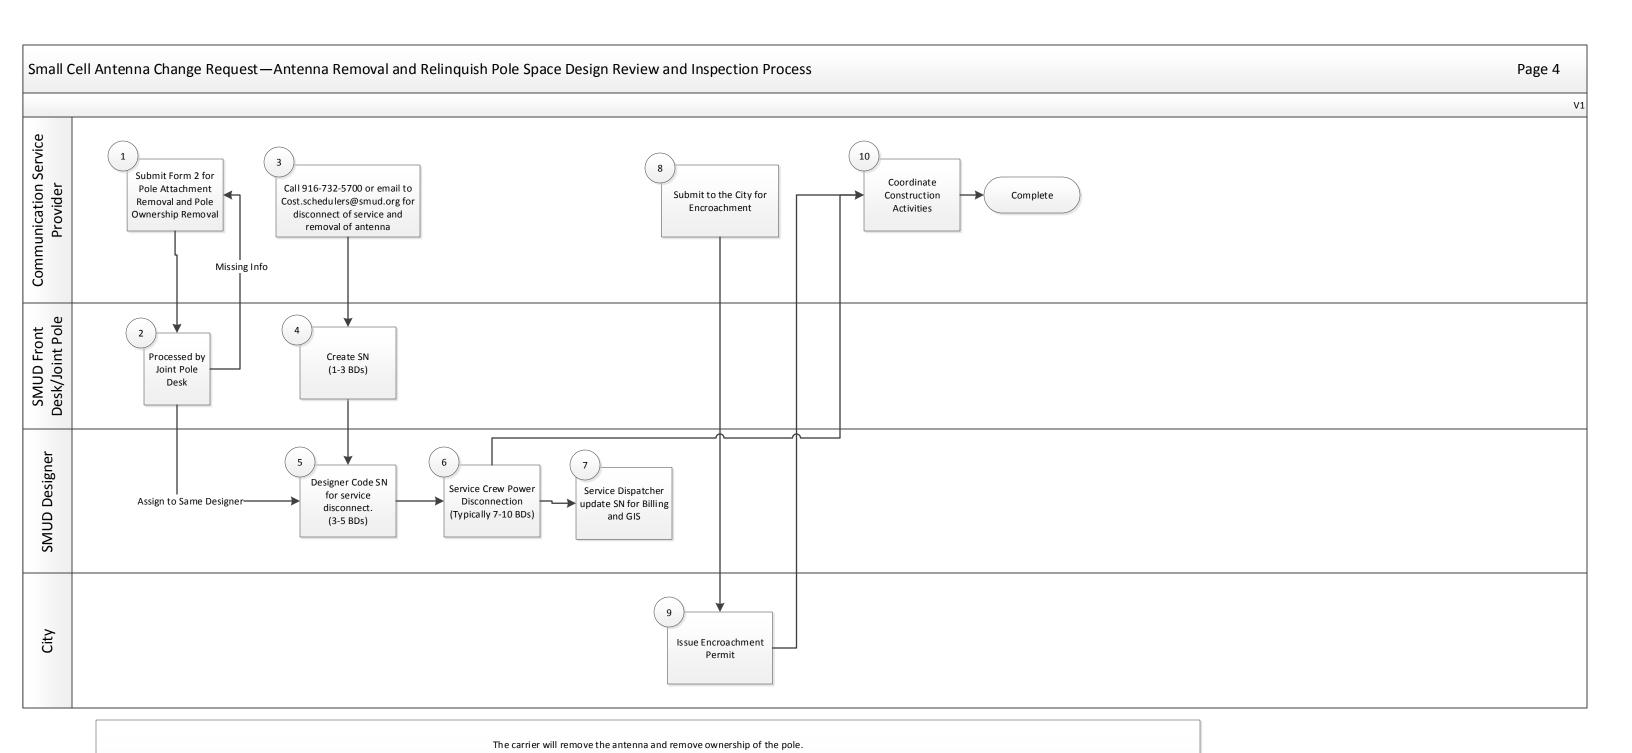

All Encroachment procedures must be followed for public right of way.

Business Days (BDs), Service Notification (SN), Construction Drawing (CN)

***Note—Numbering of tasks are not sequential

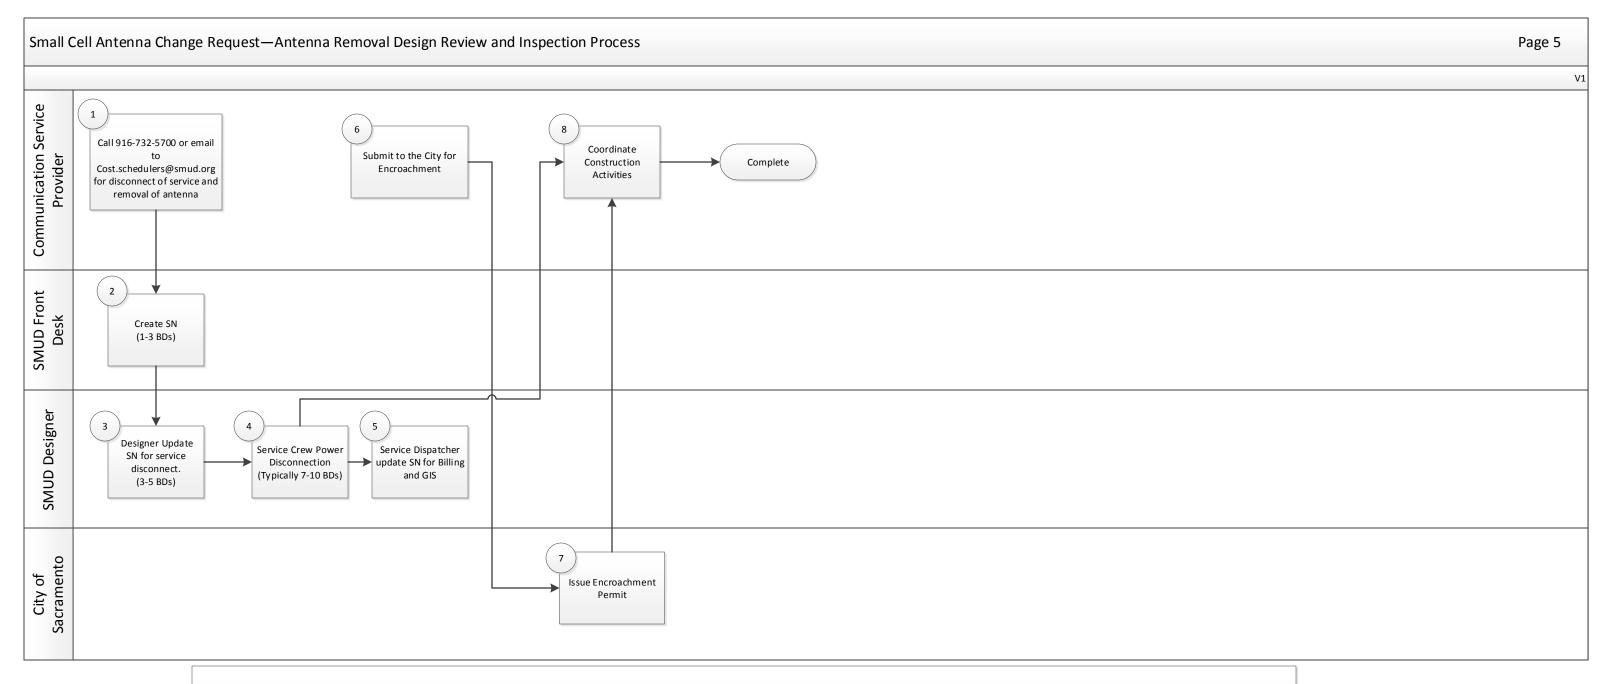

The carrier will remove the antenna on the pole.

All Encroachment procedures must be followed for public right of way.

Business Days (BDs), Service Notification (SN), Construction Drawing (CN)

***Note—Numbering of tasks are not sequential